


HANDHELD JET INSTALLATION

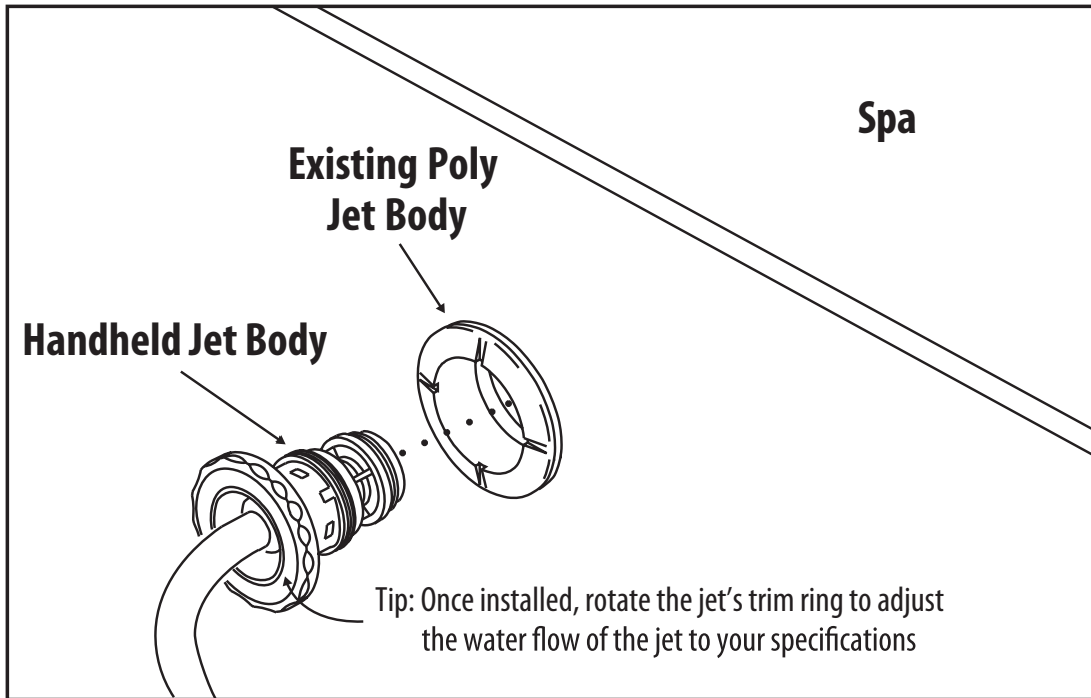

To install the handheld jet, unscrew an existing Waterway poly jet (turn counterclockwise). The existing jet may require a jet wrench for removal, available from your local spa retailer.

If the existing jet features a metal trim ring, it may have to be removed to allow removal of the existing jet and installation of the new jet. This ring can be removed by prying around its edge with a flat-head screwdriver. Use care to avoid prying the plastic jet body from the spa wall as this will cause the spa to leak.

Using your finger tips, screw in the handheld jets internal, until it locks in place. The handheld jet may be cleaned using any mild soap. **DO NOT** use abrasive or solvents for they can damage the plastic parts.



© 2008 Waterway Plastics

Waterway™

2200 East Sturgis Road, Oxnard, CA 93030 • Ph. (805) 981-0262 • Fax (805) 981-9403
www.waterwayplastics.com • waterway@waterwayplastics.com

810-0007.0109