
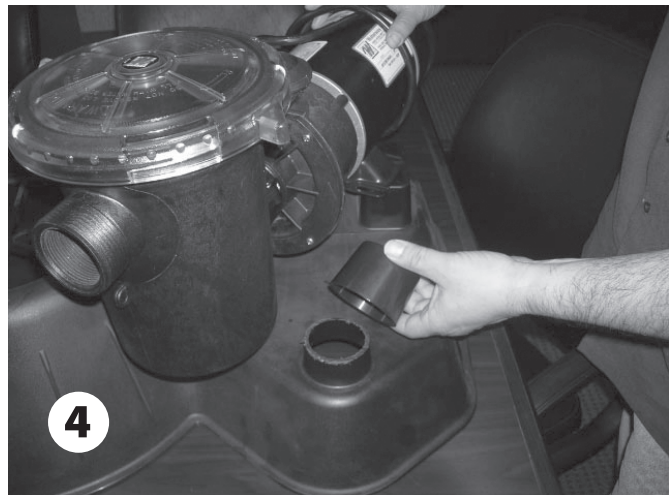
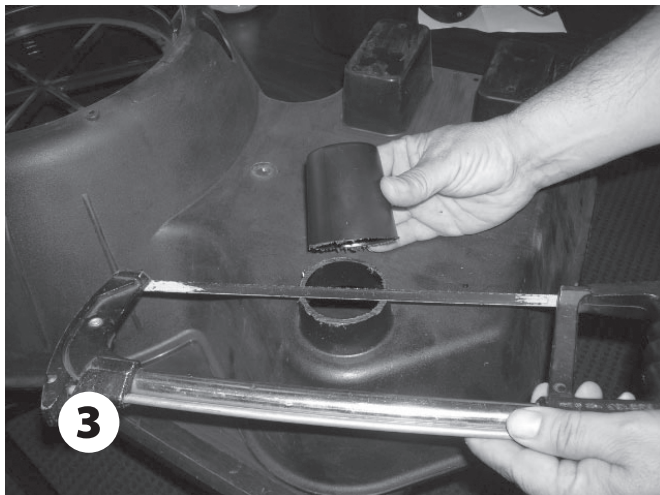
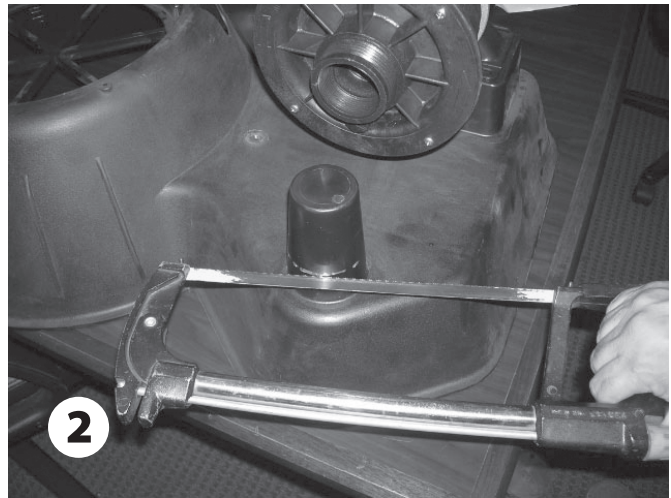


# PREPARATION FOR NEW-STYLE JACUZZI BASE

## TO ACCOMMODATE YOUR NEW WATERWAY REPLACEMENT PUMP

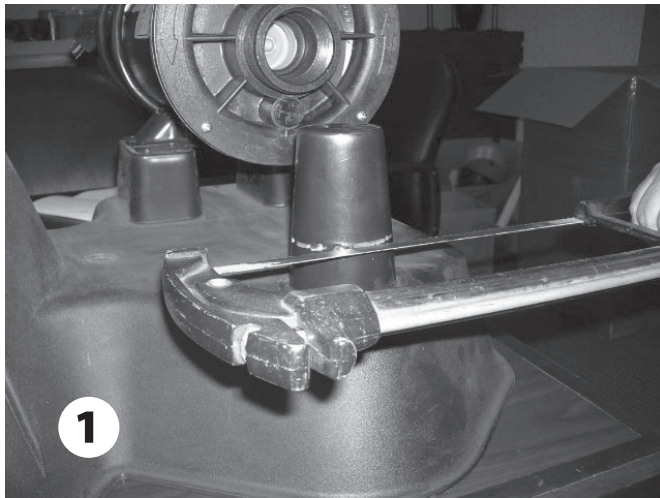

**1.** Position saw approximately 1 ¼" - 1 ½" from base of riser. **2.** Cut through riser entirely. **3.** Remove riser "cap" and discard.

**4.** Place Waterway riser cap (PN 672-1340) securely on remaining riser stub and proceed with Waterway pump installation.



© Copyright 2008 Waterway Plastics

# Waterway™

2200 East Sturgis Road, Oxnard, CA 93030 • Ph. (805) 981-0262 • Fax (805) 981-9403

[www.waterwayplastics.com](http://www.waterwayplastics.com) • [waterway@waterwayplastics.com](mailto:waterway@waterwayplastics.com)

810-0166.0109