


CHAMPION / PROCLEAN MANIFOLD INSTALLATION



1. Install threaded union adapters on inlet to filter and discharge (top) of pump, using Teflon tape supplied. Use four wraps of the Teflon tape on adapter for proper seal.



3. Finished installation should look like the picture in Figure 3. The Inlet label is on top and before the union going into the filter.

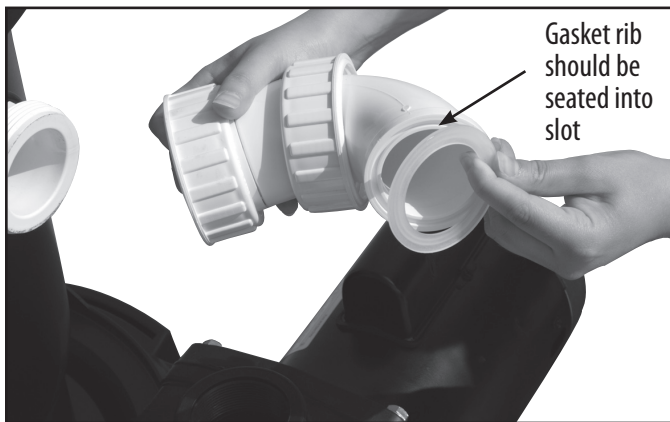

2. Make sure "rib" on gasket is seated into the slot on the manifold union assembly.



Waterway™

2200 East Sturgis Road, Oxnard, CA 93030 • Ph. (805) 981-0262 • Fax (805) 981-9403

www.waterwayplastics.com • waterway@waterwayplastics.com